


# New Arch Elegance



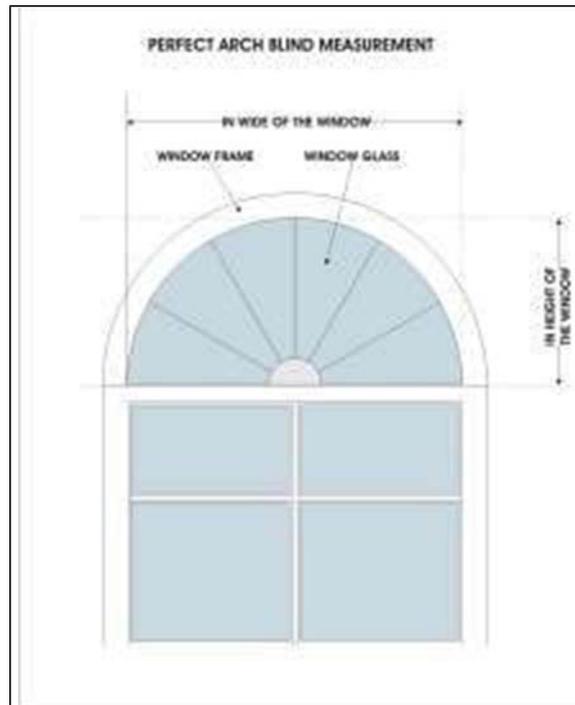

How to measure a Perfect Window Arch:

- ▶ You have to measure the "in" wide, the "in" height and the depth of the window.
- ▶ You have to be careful you need at least 2-5/8" of depth in the window to allow the arch.
- ▶ Then you have to check if it is a Perfect Arch, it means that the height is close to being half wide.
- ▶ We will talk about "in" measures because the arch mounts in the window.
- ▶ If you look at the picture above you will see the arch.
- ▶ 1- In top of window,
- ▶ 2- The back mounting view with measures,
- ▶ 3- A close view of the spring loading of each slat.

So you can understand better the measure and mounting way of it.

Perfect arches are like half circles, where the wide is the diameter and the height is the radius.

About the slats and opening:

- ▶ The arches are made out of a special PVC compound Sun heat rejection with feel and look of wood.
- ▶ They are spring loaded in each slat, to ensure your desired position maintenance.
- ▶ Each slat rotates independently from the others 170 degrees.
- ▶ They are manual operated, and they can't be motorized.

About the mounting:

- ▶ If you look at the picture above, the arch mounts "in" the window.
- ▶ They have 3 holes the smaller ones and 5 holes the bigger ones these are for mounting purposes only.
- ▶ The screws for mounting are provided, they go from the inside of the blind in radial way to the window frame.
- ▶ After you mount it, you cannot see the screws.

MODEL ARCH					FITS WINDOWS WIDE				FITS WINDOWS HEIGHT					
ARCH	S	P	O	B	FROM			TO		FROM		TO		
22	•				20	- 1/4"	" ~	23	- 3/4"	10	- 1/8"	" ~	11	- 7/8"
24	•	•	•	•	22	- 1/4"	" ~	25	- 3/4"	11	- 1/8"	" ~	12	- 7/8"
26	•				24	- 1/4"	" ~	27	- 3/4"	12	- 1/8"	" ~	13	- 7/8"
27	•	•			25	- 1/4"	" ~	28	- 3/4"	12	- 5/8"	" ~	14	- 3/8"
28	•				26	- 1/4"	" ~	29	- 3/4"	13	- 1/8"	" ~	14	- 7/8"
30	•	•	•	•	28	- 1/4"	" ~	31	- 3/4"	14	- 1/8"	" ~	15	- 7/8"
32	•	•			30	- 1/4"	" ~	33	- 3/4"	15	- 1/8"	" ~	16	- 7/8"
33	•	•	•	•	31	- 1/4"	" ~	34	- 3/4"	15	- 5/8"	" ~	17	- 3/8"
34	•	•	•	•	32	- 1/4"	" ~	35	- 3/4"	16	- 1/8"	" ~	17	- 7/8"
36	•	•	•	•	34	- 1/4"	" ~	37	- 3/4"	17	- 1/8"	" ~	18	- 7/8"
38	•				36	- 1/4"	" ~	39	- 3/4"	18	- 1/8"	" ~	19	- 7/8"
39	•	•			37	- 1/4"	" ~	40	- 3/4"	18	- 5/8"	" ~	20	- 3/8"
40	•				38	- 1/4"	" ~	41	- 3/4"	19	- 1/8"	" ~	20	- 7/8"
42	•	•			40	- 1/4"	" ~	43	- 3/4"	20	- 1/8"	" ~	21	- 7/8"
44	•				42	- 1/4"	" ~	45	- 3/4"	21	- 1/8"	" ~	22	- 7/8"
45	•	•			43	- 1/4"	" ~	46	- 3/4"	21	- 5/8"	" ~	23	- 3/8"
46	•		•	•	44	- 1/4"	" ~	47	- 3/4"	22	- 1/8"	" ~	23	- 7/8"
48	•	•	•	•	46	- 1/4"	" ~	49	- 3/4"	23	- 1/8"	" ~	24	- 7/8"
50	•				48	- 1/4"	" ~	51	- 3/4"	24	- 1/8"	" ~	25	- 7/8"
51	•	•	•	•	49	- 1/4"	" ~	52	- 3/4"	24	- 5/8"	" ~	26	- 3/8"
52	•	•	•	•	50	- 1/4"	" ~	53	- 3/4"	25	- 1/8"	" ~	26	- 7/8"
54	•	•			52	- 1/4"	" ~	55	- 3/4"	26	- 1/8"	" ~	27	- 7/8"
56	•				54	- 1/4"	" ~	57	- 3/4"	27	- 1/8"	" ~	28	- 7/8"
57	•	•		•	55	- 1/4"	" ~	58	- 3/4"	27	- 5/8"	" ~	29	- 3/8"
58	•	•	•		56	- 1/4"	" ~	59	- 3/4"	28	- 1/8"	" ~	29	- 7/8"
60	•	•	•	•	58	- 1/4"	" ~	61	- 3/4"	29	- 1/8"	" ~	30	- 7/8"
63	•	•	•	•	61	- 1/4"	" ~	64	- 3/4"	30	- 5/8"	" ~	32	- 3/8"
66	•	•	•		64	- 1/4"	" ~	67	- 3/4"	32	- 1/8"	" ~	33	- 7/8"
69	•	•	•	•	67	- 1/4"	" ~	70	- 3/4"	33	- 5/8"	" ~	35	- 3/8"
70	•	•	•	•	68	- 1/4"	" ~	71	- 3/4"	34	- 1/8"	" ~	35	- 7/8"
72	•	•	•	•	70	- 1/4"	" ~	73	- 3/4"	35	- 1/8"	" ~	36	- 7/8"

(S) Snow White – (P) Pearl White – (O) Oyster White, - (B) Birch